



Lankhorst|*Ropes*

LANKO®FORCE – quick splice instructions

Splice Instruction

Tel. +31 515 487654
splicing@lankhorstropes.com

LANKO®FORCE quick splice instructions

Mark 1


At 10 times the rope diameter from end of rope.

Mark 2

At 45 times the rope diameter from end of rope.

Mark 3

After forming desired eye length.

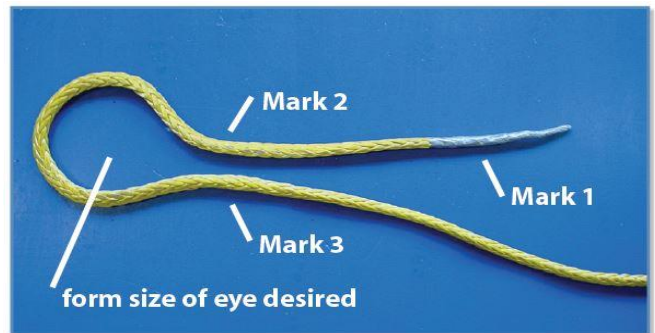

Tapering the end by cutting strands over a length of 10 times the rope diameter, up to mark 1, may be performed before or after the inserting the end into the standing part.



Pull the full rope twice through the standing part of the rope and bury the tail into standing part of the rope by using a hollow splice pen. If the tail should still be tapered then let the end come out of the standing part. Ensure the tail has been pulled deep enough to re-enter the standing part.



Now ensure that mark 2 and 3 are again in place. Then hold the crotch of eye tight and pull back the cover over the inserted core.

THE SPLICE IS NOW COMPLETE.

